




Step 1. - Remove old Grip.

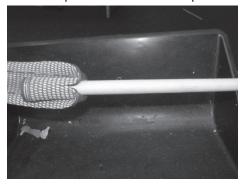


Step 2. - Remove ALL old tape from shaft of club.

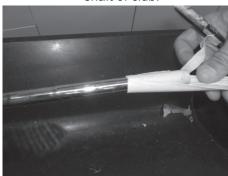

Step 3. - Mark shaft for the length of the tape.

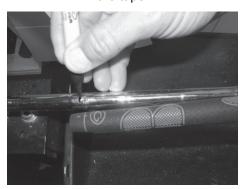

Step 4. - Measure Hand size - see chart at right for MAXIMUM build up.

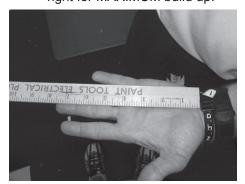

Hand Size (measure from crease in wrist to tip of longest finger)	Recommended GGA Grip size
less than 6 1/2"	no build up required
6 1/2" to less than 7"	1 wrap under full length of grip
7" to less than 7 1/2"	2 wrap under full length of grip
7 1/2" to less than 8"	3 wrap under full length of grip
more than 8"	4 wrap under full length of grip

Step 5. - Build up tape on shaft according to hand size chart.




Step 7 - Install Grip. **RED** 'G' up for right handed golfer, **WHITE** 'G' up for left handed golfer



Right Hand side red 'G'

Left Hand side white 'G'

Step 6. - Put Solvent in Grip and on tape.

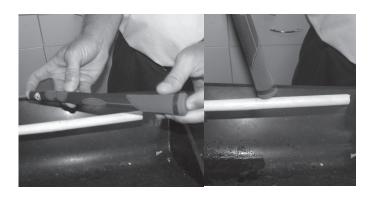

Step 8 - Align 'tick' marks on each end of grip and center line with square club face.

